


## Six Foot Skinny (25.5") Corner Module (approximately to scale)

Looking up from bottom

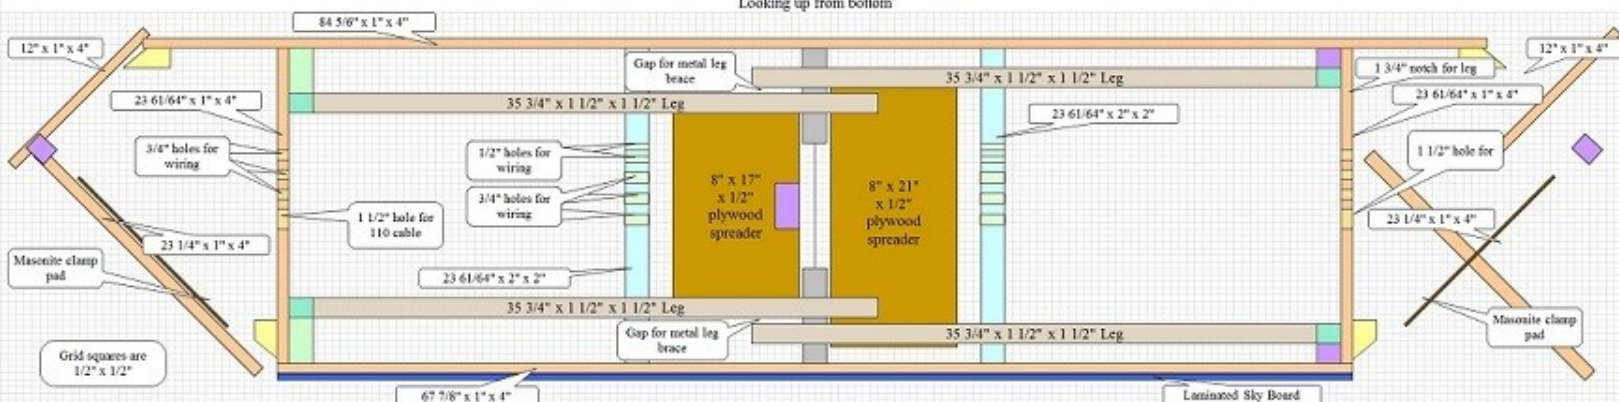

Place six Homosote plugs on the fascia boards as follows: One centered on each 12" board and four on the 85" front fascia, two w/ centerline 5" from each end of the board and two with centerline 30" from each end of the board.

Rout out holes for two Digitrax UP-5s, one centered on the front fascia and one centered on the back. The bottom of the UP-5 should be 2" from the bottom of the fascia board. Cut a hole in the skyboard to provide access to the rear UP-5.